

For questions about features, operation/performance, parts, or service, call: **1-800-207-1156**.
In Canada, for assistance, installation, or service, call: **1-800-207-1156**.

Models:

WHAD40PCW WHAD50PCW

Table of Contents

DEHUMIDIFIER SAFETY	2	TROUBLESHOOTING	11
INSTALLATION REQUIREMENTS.....	3	ASSISTANCE OR SERVICE.....	13
PARTS AND FEATURES	5	XLS PRODUCTS WARRANTY FOR	
USING YOUR DEHUMIDIFIER	6	WHIRLPOOL® DEHUMIDIFIERS	14
CARE AND CLEANING	10		

DEHUMIDIFIER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, injury or sickness when using your dehumidifier, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack experience and knowledge, unless they have been given supervision or instruction concerning the use of appliance by a person responsible for their safety.
- Do not use an extension cord.
- Unplug dehumidifier before servicing.
- Do not drink water collected in the water bucket.
- Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

Disposing of the unit:

- When you need to dispose of the unit, consult with your local dealer or local recycling center for information on how to dispose of the unit in an environmentally responsible manner.
- Please recycle or dispose of the packaging material for the product in an environmentally responsible manner.

INSTALLATION REQUIREMENTS

Electrical Requirements—All Models

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

The electrical ratings for your dehumidifier are listed on the model and serial number label. The model and serial number label is located on the right-hand side of the dehumidifier cabinet.

Electrical Requirements

- 115 V(103.5 min.-126.5 max.)
- 0-12 A
- 15 A time-delay fuse or circuit-breaker
- If there is a "Single Circuit Only" label on the unit, use on a dedicated single-outlet circuit only. If a dedicated single-outlet circuit is not available, then it is the customer's responsibility to have a single-outlet circuit installed by a qualified electrician.
- If there is no "Single Circuit Only" label on the unit, the unit may be used on any branch circuit of correct voltage and adequate current protection rating.

Recommended Grounding Method

This dehumidifier must be grounded. This dehumidifier is equipped with a power supply cord having a grounded 3 prong plug. To minimize possible shock hazard, the cord must be plugged into a mating, grounded 3 prong outlet, grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3 prong outlet installed by a qualified electrical installer. It is the customer's responsibility:

- To contact a qualified electrical installer.
- To assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70 - latest edition, and all local codes and ordinances.

Copies of the standards listed may be obtained from:

National Fire Protection Association
1 Batterymarch Park
Quincy, MA 02269

Installation Instructions

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install dehumidifier.

Failure to do so can result in back or other injury.


Remove Packaging Materials:

- Handle the dehumidifier gently while unpacking the unit.
- Remove the carton top and lift the dehumidifier from the base pad.
- Remove tape and glue residue from surfaces before turning on the dehumidifier. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with a damp cloth and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your dehumidifier.
- Dispose of/recycle packaging materials in an appropriate way.

Placement

This dehumidifier must be placed on a stable, level, and solid floor that will support its weight with a full bucket of water. Allow at least 12-18" (30-45 cm) of clearance from walls and furniture. Do not allow the air inlet or outlet to be covered by drapes or curtains, as this will reduce performance.

- Use the dehumidifier in an area where the temperature will not fall below 41°F (5°C). At temperatures below 41°F (5°C), the coils can become covered with frost, resulting in reduced performance.
- Use the dehumidifier in cooking, laundry, bathing, and dishwashing areas that have excessive moisture.
- Use the dehumidifier to prevent moisture damage anywhere books or valuables are stored.
- Use the dehumidifier in a basement to help prevent moisture.
- The dehumidifier must be operated in an enclosed area to be most effective.
- Close all doors, windows, and other outside openings in the room.

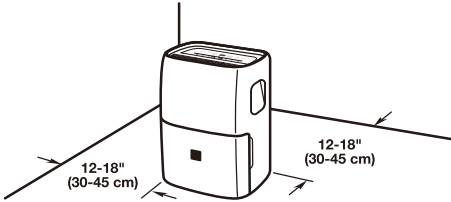

Electrical Connection

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.


Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Plug into grounded 3 prong outlet

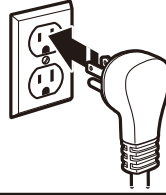

CAN ICES-3 (B)/NMB-3(B)

ID : 2ANDL-TYWE1S IC : 23243-TYWE1S

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The distance between user and device should be no less than 20 cm.


IC Warning

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:


- (1) This device may not cause interference; and
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Caster Installation

1. Remove casters from bucket

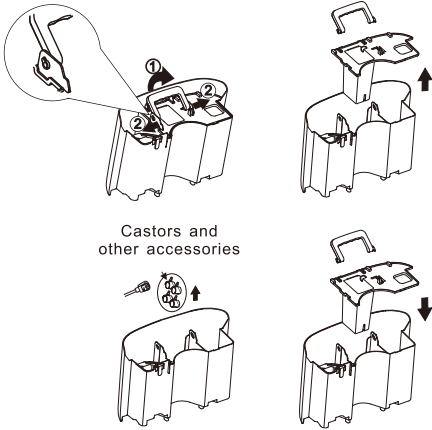

2. Install casters

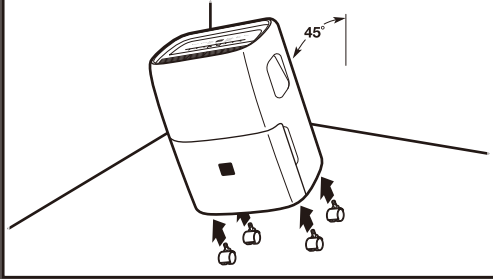


Tilt the dehumidifier at no more than a 45-degree angle. With force, insert the four casters into the caster locations at the bottom of the dehumidifier. Make sure the ring around the caster is flush against the bottom of the dehumidifier.


Before use, remove the accessory from the bucket.

- Remove the bucket, rotate the handle to the position like fig below, and remove the handle.
- Open the cover, take out of the the plug, and other accessories.
- Re-install the cover and handle, correctly put back the bucket into the unit.

PARTS AND FEATURES

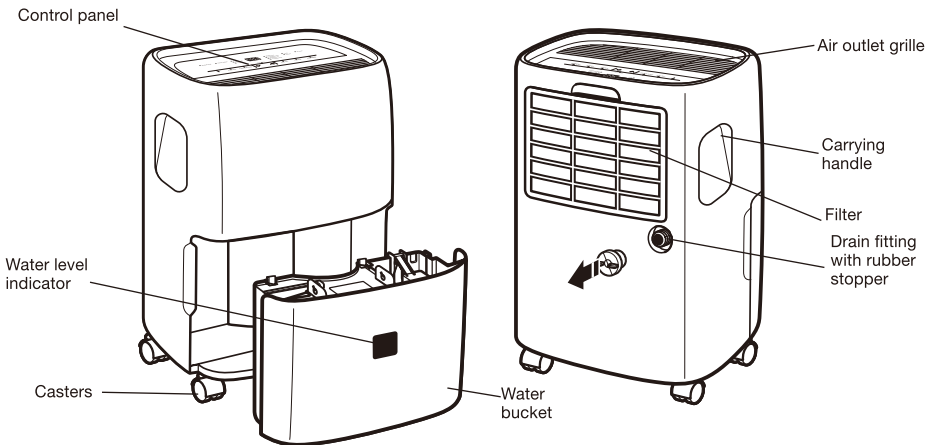

USING YOUR DEHUMIDIFIER

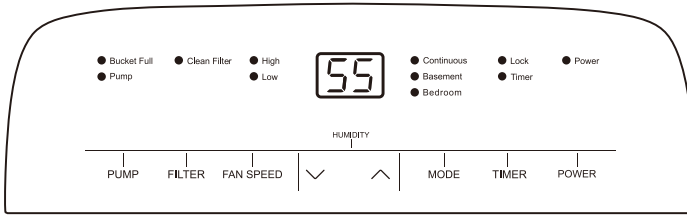

Turning the Dehumidifier On or Off

When you first plug in the dehumidifier, it will beep once and the display will show the current temperature and relative humidity level.

Press **POWER** to turn the dehumidifier on or off.

IMPORTANT:

- When first operating the dehumidifier, run it in Continuous mode for 24 hours.
- If you turn off the dehumidifier, wait at least 3 minutes before turning it back on.
- Do not try to operate your dehumidifier if the temperature in the room is below 41°F (5°C) or above 95°F (35°C).

NOTE: In the event of a power failure, your dehumidifier will operate at the previous settings when the power is restored.



Using the Timer

Auto Shut-Off

You can set the dehumidifier to shut off automatically after a set amount of time, up to 24 hours.

To set Auto Shut-Off:

1. With the dehumidifier on, press **TIMER**.
2. Press the up or down arrow button to increase or decrease the timer in 30-minute increments (0.5 hours) up to 10 hours. After 10 hours, each press of the button will increase the timer in one-hour increments up to 24 hours.
3. After the set time, the dehumidifier will turn off automatically.



Selecting the Fan Speed

The Fan Speed has 2 settings:

- Low
- High



 
Press the **FAN SPEED** button until the indicator light for the desired setting is lit.

Selecting the Humidity Level

Press the up or down arrow button to increase or decrease the humidity setting. The relative humidity level can be adjusted between 35% and 80%.

Each press of the button will change the desired room humidity by 5%. The unit will cycle on and off to maintain the humidity level chosen on the digital display.

To operate the dehumidifier continuously regardless of the room humidity, press the Mode button until you see "CO" on the digital display. This will enable continuous operation and the "Continuous" indicator will light up on the control panel.



Preset Modes

Preset humidity level settings allow the user to easily move the dehumidifier from room to room. For optimum performance, select the corresponding mode for the location in which the dehumidifier is operating.

Press the **MODE** button to choose from Bedroom, Continuous, or Basement.



Child Lock Mode

Locking the control panel prevents someone from accidentally changing the settings.

1. To lock the control panel, press and hold **TIMER** for 3 seconds. The Lock indicator will light up.
2. To unlock the control panel, press and hold **TIMER** for 3 seconds. The Lock indicator will turn off.



Bucket Full Indicator

When the water bucket is full of water, the unit will automatically shut off, make a beeping noise, and the Bucket Full Indicator will light up. See the "Emptying the Water Bucket" section for more information.

● Bucket Full

Clean Filter Indicator

After 250 hours of use, the Clean Filter indicator will light up to indicate that the filter needs to be cleaned. See the "Cleaning the Filter" section for more information.

● Clean Filter

Automatic Defrost

If the dehumidifier operates for an extended time in low temperatures, ice may form on the cooling coils. If this happens, the dehumidifier compressor will turn off and the fan will run until the accumulated ice has melted. When the coils are completely defrosted, the compressor or fan (depending on the model) will automatically restart and dehumidification will resume.

Emptying the Water Bucket

⚠ WARNING


Sickness Hazard

Do not drink water collected in water bucket.
Doing so can result in sickness.

When the water collection bucket is full, the Bucket Full indicator will light and the dehumidifier will turn off. The dehumidifier will not function until the water bucket is emptied and replaced.

When the bucket is removed from the machine, the compressor will turn off, but the fan will continue to run for a few minutes. This is normal. The dehumidifier will not be removing moisture from the air at this time.


1. Remove water bucket

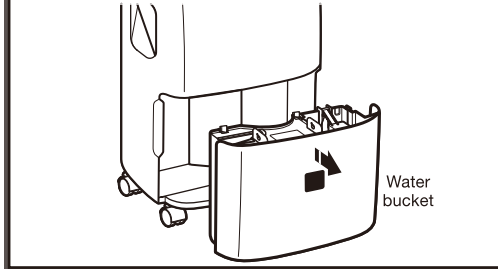

Remove the water bucket by pulling it straight out from the bottom front of the dehumidifier. The bucket features a convenient carry handle for easier transport.

NOTE: Do not place a full bucket on the floor, as the bottom is uneven and the bucket may tip.

2. Empty water bucket

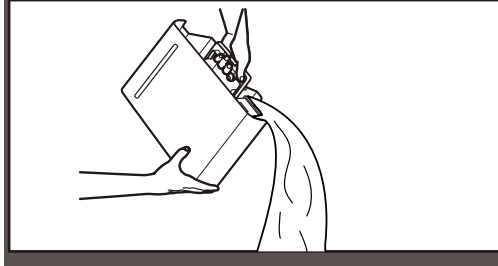

NOTE: Hold the water bucket with both hands when emptying. Empty the water bucket into a sink or drain.

Slide the water bucket back into the dehumidifier.

Drain Hose Connection


The dehumidifier can be set up to run continuously (depending on selected humidity level) one of two ways:

1. Drain into a floor drain or other drain below the drain port on the back of the dehumidifier.
2. Drain to a remote drain up to 16 feet (5 m) above the height of the dehumidifier using the dehumidifier's internal pump.

The drain fitting uses a standard garden hose connector.


NOTE: Use GHT or "garden hose thread", which has an outer diameter of $1\frac{1}{16}$ " (27 mm) and a pitch of 11.5 TPI (threads per inch) or use the included drain hose kit.

1. Remove drain fitting plug

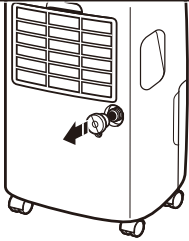

Place the dehumidifier on a level surface. Unscrew the cap on the back of the unit to access the drain fitting, and remove the drain plug. Keep the drain plug in a safe place for reuse.

2. Drain to floor drain

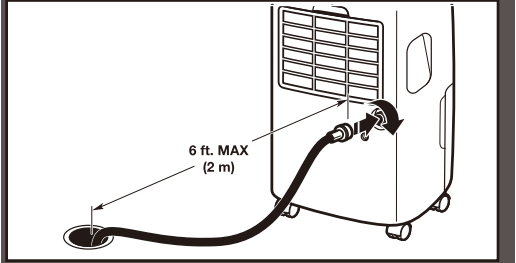

Thread the hose clockwise securely onto the drain fitting and place the other end into a floor drain below the height of the drain fitting.

NOTE: To ensure proper drainage, hose length should not exceed 6 feet (2 m). Be sure there are no kinks in the hose.

Internal Pump Mode and Drain Hose Connection (optional)


The dehumidifier can be set up to run continuously (depending on selected humidity level) one of two ways:

1. Drain into a floor drain or other drain below the drain port on the back of the dehumidifier.
2. Drain to a remote drain up to 16 feet (5 m) above the height of the dehumidifier using the dehumidifier's internal pump.

The drain fitting uses a standard garden hose connector.

NOTE: The drain connection and water pipe must be installed as standard.


3. Drain to floor drain

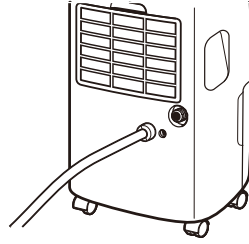

Thread the hose clockwise securely onto the drain fitting and place the other end into a floor drain below the height of the drain fitting.


NOTE: To ensure proper drainage, hose length should not exceed 6 feet (2 m). Be sure there are no kinks in the hose.

1. Remove drain fitting plug

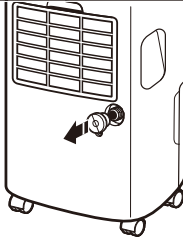

Place the dehumidifier on a level surface. Unscrew the cap on the back of the unit to access the drain fitting, and remove the drain plug. Keep the drain plug in a safe place for reuse.


4. Drain using internal pump

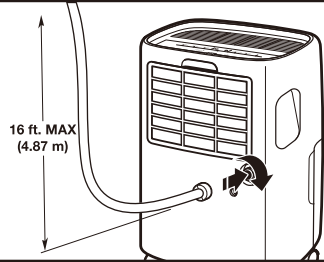

Thread the hose clockwise securely onto the drain port. Route the hose to a suitable drain. Turn on the unit and press the PUMP button. The Pump indicator will light.

NOTE: To ensure proper drainage, hose length should not exceed 50 feet (16 m). Water may be pumped to a height of up to 16 feet (5 m) above the drain fitting. Be sure there are no kinks in the hose.

2. Install drain hose with included kit

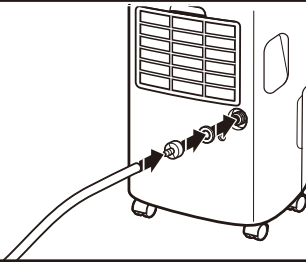

If using the included drain hose kit, press the gasket into the large end of the drain hose adapter. Then press the clear drain hose firmly onto the small end of the adapter.

 
NOTE: You may also use a standard garden hose. Do not exceed the recommended length for your installation type.

CARE AND CLEANING

Your new dehumidifier is designed to give you many years of dependable service. This section tells you how to clean and care for your dehumidifier properly.

Cleaning the Filter

The filter is removable for easy cleaning. A clean filter helps remove dust, lint, and other particles from the air and is important for best operating efficiency. Check the filter every two weeks to see whether it needs cleaning.




NOTE: For best performance, do not operate the dehumidifier without the filter in place.

Rinse the filter under the faucet. If the filter is very dirty, wash it in warm water with a mild detergent.

NOTE: Do not wash the filter in the dishwasher or use any chemical cleaners; this may damage the filter. Air dry the filter completely before replacing to ensure maximum efficiency.

Remove the filter

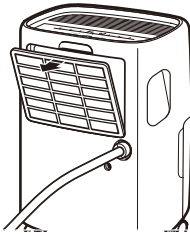

Remove the filter from the back of the unit by using your thumbs to press down on the tabs directly above the filter.

Reinstalling the filter:

1. Wait until the filter is completely dry.
2. Reinstall the filter in the dehumidifier.
3. Press the FILTER button to reset the filter indicator.

Cleaning the Dehumidifier Cabinet

1. Turn off the dehumidifier.
2. Wipe the dehumidifier cabinet with a soft, damp cloth.
3. Wipe dry with soft cloth.

Cleaning the Water Bucket

The water bucket should be cleaned every few weeks to prevent mold and mildew growth.

1. Remove the water bucket.
2. Wash the bucket with a mixture of warm water and a mild detergent.
3. Rinse well, then reinstall water bucket.

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install dehumidifier.

Failure to do so can result in back or other injury.

Storing the Dehumidifier


If the dehumidifier will not be used for an extended period of time, prepare it for storage with the following steps:

1. Turn off the dehumidifier and unplug it.
2. Empty the bucket.
3. Remove, clean, and reinstall the filter.

TROUBLESHOOTING

Before calling for service, try the suggestions below to see whether you can solve your problem without outside help.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

PROBLEM	POSSIBLE CAUSES	RECOMMENDED SOLUTIONS
The Dehumidifier Will Not Start	The dehumidifier is unplugged.	Make sure the power supply cord is plugged into a grounded 3 prong outlet. See the "Electrical Requirements" section.
	The fuse is blown/circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the breaker. See the "Electrical Requirements" section.
	Power failure.	The unit will automatically restart when power is restored. There is a protective time delay (approximately 3 minutes) to prevent tripping of the compressor overload. The unit may not start normal cooling for 3 minutes after it is turned back on.
	The dehumidifier has reached a set humidity level or the bucket is full.	The dehumidifier automatically turns off when either condition occurs. Change to a lower humidity level or empty the water bucket and replace properly.
	The bucket is not in the proper position.	Securely seat the bucket in place.
The Dehumidifier Is Not Drying the Air As It Should	Airflow is restricted.	Make sure there are no curtains, blinds, or furniture blocking the front of the dehumidifier.
	The temperature control is not set correctly.	Lower the set thermostat temperature.
	The humidity control may be set too high.	For drier air, press the down arrow button to lower the percent humidity desired in the room, or set the dehumidifier to CO for maximum dehumidification.
	The room is too cool.	Moisture removal works best at higher room temperatures. Lower room temperatures will reduce the moisture removal rate. Your dehumidifier is designed to operate at temperatures above 41°F (5°C).
	Doors and windows are not closed tightly.	Check that all doors, windows, and other openings are securely closed.
	The dehumidifier is blowing moist air into the room.	If the dehumidifier vents into the house, the dehumidifier may not be able to keep up with the amount of moisture added to the air.
	The dehumidifier has just been installed.	When first installed, allow at least 24 hours to reach the desired dryness.
The Dehumidifier Runs Too Much	The area to be dehumidified is too large.	The capacity of your dehumidifier may not be adequate for the room size.
	Doors and windows are open.	Close all doors and windows to the outside.

PROBLEM	POSSIBLE CAUSES	RECOMMENDED SOLUTIONS
Frost Appears On the Coils	The dehumidifier has recently been turned on or the room temperature is below 41°F (5°C).	This is normal. Frost will usually disappear within 60 minutes.
Controls Cannot Be Set	The compressor will turn off and the fan will automatically continue to run for approximately 3 minutes at a fixed setting.	This is normal. Wait approximately 3 minutes and set the fan speed at the desired level.
	Air is moving through the unit.	This is normal.
There Is Water On the Floor	Hose connection may be loose.	Check the hose connection and make sure it is tight. See the "Continuous Mode and Drain Hose Connection" section for more information.
	Hose is attached but not draining.	Make sure the hose is placed so that the water will flow into a drain. See the "Continuous Mode and Drain Hose Connection" section for more information.

If the following error code appears, please check the causes and solution.

CODE	DESCRIPTION	POSSIBLE CAUSES	SOLUTIONS
EH	Humidity sensor failure	Humidity sensor is damaged.	Connect customer service center.
E1	Temperature sensor failure	Temperature sensor is damaged.	Connect customer service center.
E2			
E3	Gas leakage	Ambient temperature is too high.	Move the appliance to cooler place.
		E3 appears many times.	Connect customer service center.
P1	Bucket pull out	The bucket isn't in proper position.	Please Re-install the bucket and make it in proper position.
E5	Pump failure	Didn't install the pump drainage kit before start pump function.	Install the pump drainage kit, before start pump function.
		Users use non-standard drainage pipes. (Manufacturer's original pipe)	Use the original pipe.
		The drain cover is not tightened.	Tighten the cover.
		The rubber washer is missing.	Re-install the washer in cover.
		Poor connection between drain pipe and drain cover.	Check the connection of pipe and drain cover.

NOTE:

1. The code "P1" and "E5" is only for pump model, others model appliance have not these two codes.
2. If E3 appears, check to see if the ambient temperature is above 32°C. If so, place the unit into an area below 32°C (30°C Suggested) for two hours before running the air conditioner again. After the two hours, start the unit up. If E3 appears again within 2 hours, please contact the service center.

Strictest operation environment: 5°C~32°C (41°F~90°F) , 30%RH~90%RH.

ASSISTANCE OR SERVICE

Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If you still need help, follow the instructions below.

When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us better respond to your request.

In the USA

Call XLS Products Customer Service toll free at 1-800-207-1156.

Our consultants provide assistance with:

- features and specifications on our full line of appliances.
- installation information.
- use and maintenance procedures.
- accessories and repair parts.
- specialized customer assistance.
- referrals to local dealers, repair parts distributors, and service companies. XLS Products designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States.

For further assistance:

If you need further assistance, you can write to XLS Products with any questions or concerns at

XLS Products, Inc.
Customer Service
P.O. Box 16262
Philadelphia, PA 19114-0262

Please include a daytime phone number in your correspondence.

In Canada

Call the XLS Products Customer Service toll free at 1-800-207-1156.

Our consultants provide assistance with:

- features and specifications on our full line of appliances.
- use and maintenance procedures.
- accessories and repair parts.
- referrals to local dealers, repair parts distributors, and service companies. XLS Products designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in Canada.

For further assistance:

If you need further assistance, you can write to XLS Products with any questions or concerns at

XLS Products, Inc.
Customer Service
P.O. Box 16262
Philadelphia, PA 19114-0262

Please include a daytime phone number in your correspondence.

XLS PRODUCTS WARRANTY FOR WHIRLPOOL® DEHUMIDIFIERS

ONE YEAR LIMITED WARRANTY

For one year from the date of purchase, when this product is operated and maintained according to instructions attached to or furnished with the product, XLS Products will pay for replacement parts and repair labor to correct defects in materials or workmanship or replace the product at our discretion. Service must be provided by a XLS Products designated service company. This warranty does not cover the air filter.

ITEMS XLS PRODUCTS WILL NOT PAY FOR

1. Service calls to correct the installation of your product, instruct you how to use your product, to replace house fuses or reset circuit breakers, replace or clean filters, or correct house wiring.
2. Service calls to repair or replace air filters. Those consumable parts are excluded from warranty coverage.
3. Repairs when your product is used for other than normal, single-family household use.
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by XLS Products.
5. Replacement parts or repair labor costs for units operated outside the United States or Canada
6. Pickup and delivery. This product is designed to be repaired in the home.
7. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
8. Expenses for travel and transportation for product service in remote locations.
9. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. XLS PRODUCTS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY, FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized XLS Products dealer to determine if another warranty applies.

If you need service, first see the "Troubleshooting" section of the Use & Care Guide. After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling XLS Products. In the U.S.A., call 1-800-207-1156. In Canada, call 1-800-207-1156.

Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your dehumidifier to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label located on the product.

Dealer name _____
Address _____
Phone number _____
Model number _____
Serial number _____
Purchase date _____