

Quick Start – Add Water

1) REMOVE VACUUM COLLECTION TANK AND ADD WATER TO THE FILL LINE

- Lift both silver handles to remove lid
- Remove Collection Tank
- ADD WATER TO FILL LINE



2) FILL RESERVIOR TANK AND EXTRACTION TANK WITH TAP WATER




3) PLUG INTO ELECTRICAL OUTLET

- The SeaHawk should be the only appliance plugged into the power outlet
- It will take 5 minutes for the SeaHawk to heat and be ready to use



USE only a Heavy-Duty extension cord

- 10 or 12 Gauge
- 15 AMP / 125V
- 25-50 FT in length

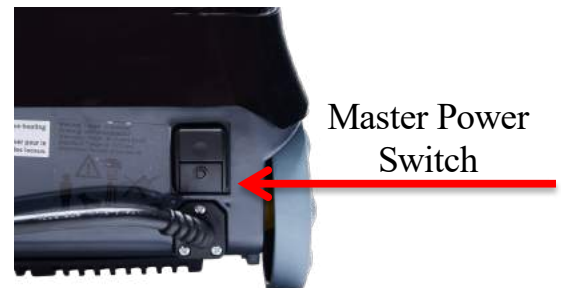

Quick Start

4) HOSE CONNECTION

- Lift silver lid and insert hose
- Listen for a “click” when attaching



5) ON/OFF – Push BOTH the STEAM & VACUUM Buttons



Vacuum ON/OFF

- Push button to turn ON the vacuum
- If the lights are blinking, push the button again until they go solid
- One solid light = LOW vacuum
- Two lights = MEDIUM vacuum
- ***Vacuum will only operate on Low & Medium when using with steam***
- **MAX Vacuum** can only be used when used steam is OFF.

Steam Button

- Push button to start building steam pressure
- Orange blinking light = boiler is heating
- Orange light will turn solid when ready
- Orange light will blink during use. This means boiler is heating
- **RED BLINKING LIGHT** = low water



➤ ***Vacuum will only operate on Low & Medium when using with steam***

- Press the vacuum button ❄️ on the hose handle to activate
- To turn the vacuum OFF, push the ❄️ button on the handle
- PUSH and HOLD ❄️ button on hose handle to increase / decrease vacuum suction



Quick Start – Adjusting Steam Pressure

6) STEAM PRESSURE ADJUSTMENT

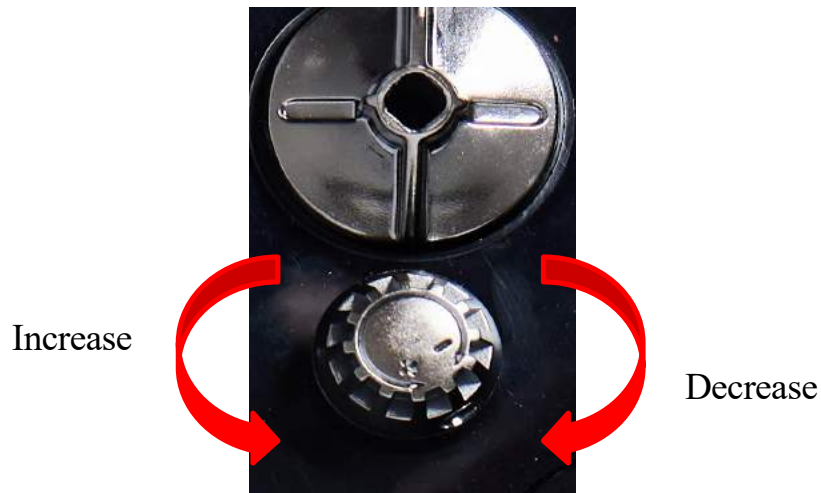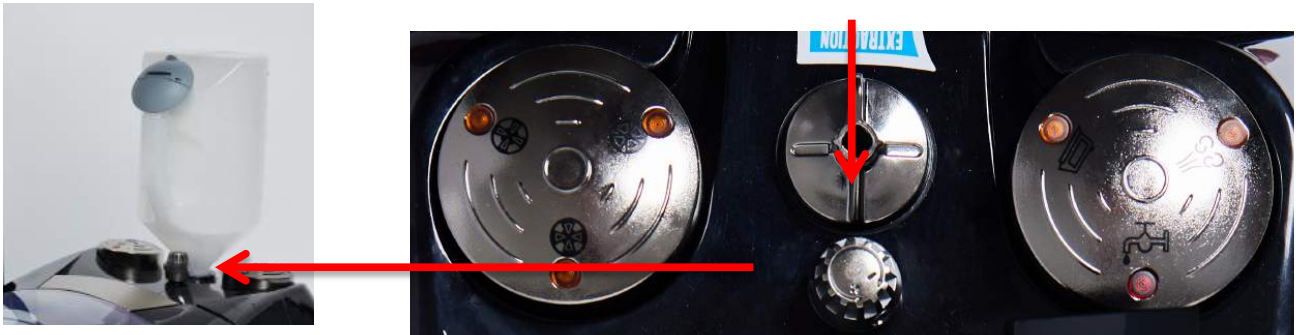

Turning the dial all the way to (-) is the lowest possible setting and ***NO steam will be released from the hose***

Quick Start


7) BLEED THE HOSE

Pull the trigger on the hose handle for 10 seconds to **BLEED** excess water from the hose. Hold over sink to catch excess water.

- When only steam is released from the hose, your SeaHawk is ready to use

8) EXTRACTION

When activated, the extraction feature sprays hot water along with steam for deep cleaning.

- Fill extraction bottle with water and connect to the back of the SeaHawk.
- Activate: Push and hold the  button on the hose handle
- The light on the handle turns ON during extraction mode



9) REFILLING

- When your SeaHawk runs low on water, the **Red** indicator water light will flash and start beeping
- Refill the reservoir and extraction tank