




MINUSA2 INITIAL FILTER INSTALLATION QUICK START GUIDE

LET'S BEGIN!


Do not operate the unit until completing these steps first

START HERE


1. Remove the front panel by lifting from the bottom and pulling up.

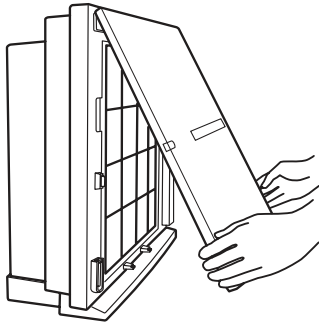




2. Remove the filter case by grasping the handles on either side and pulling forward. Lay the filter case on a flat surface.

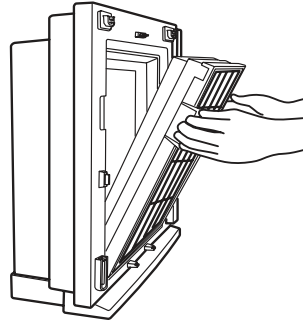


3. Pull the tabs on the front of the Pre-filter to remove it.

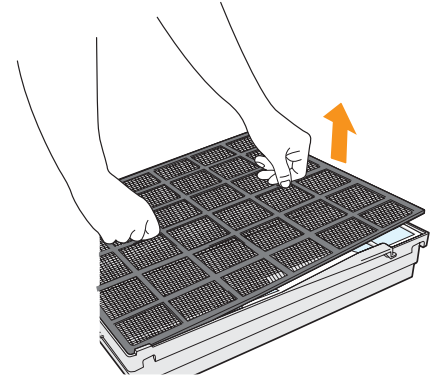



4. Remove the white Medium Filter from the black frame to discard the plastic wrapping. Return the filter to its frame.

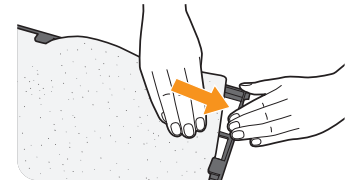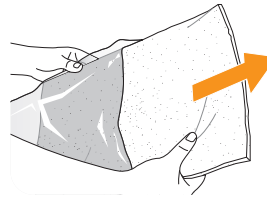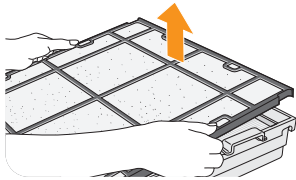




5. Remove HEPA Filter and discard plastic wrapping.

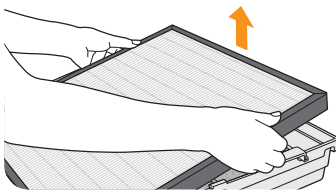

6. Remove the Customized Filter from the black frame to discard plastic wrapping. Return the filter to its frame. Make sure the front of the filter is facing up. See Customized Filter chart on the next page to identify the front of your specific filter.

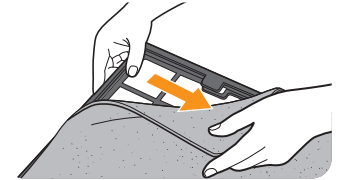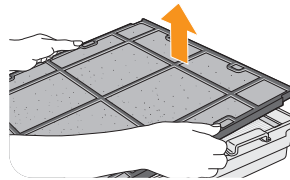

7. Pull out the Activated Carbon Filter and discard plastic wrapping.

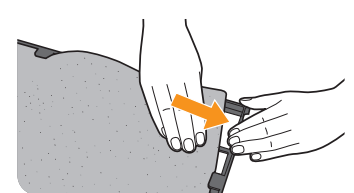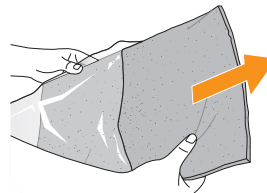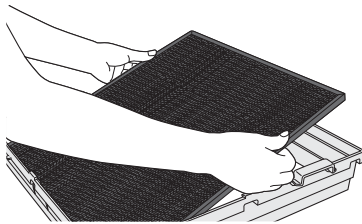

24/7 CUSTOMER CARE



For questions, call 888.866.8862
Visit us at www.rabbitair.com


NEXT PAGE




FINISHING UP!

Do not operate the unit until completing these steps first

8. Return the filters to the filter case in the following order from back to front:
 Activated Carbon Filter,
 Customized Filter,
 HEPA Filter,
 Medium Filter,
 Pre-filter.
 (See diagram at right)

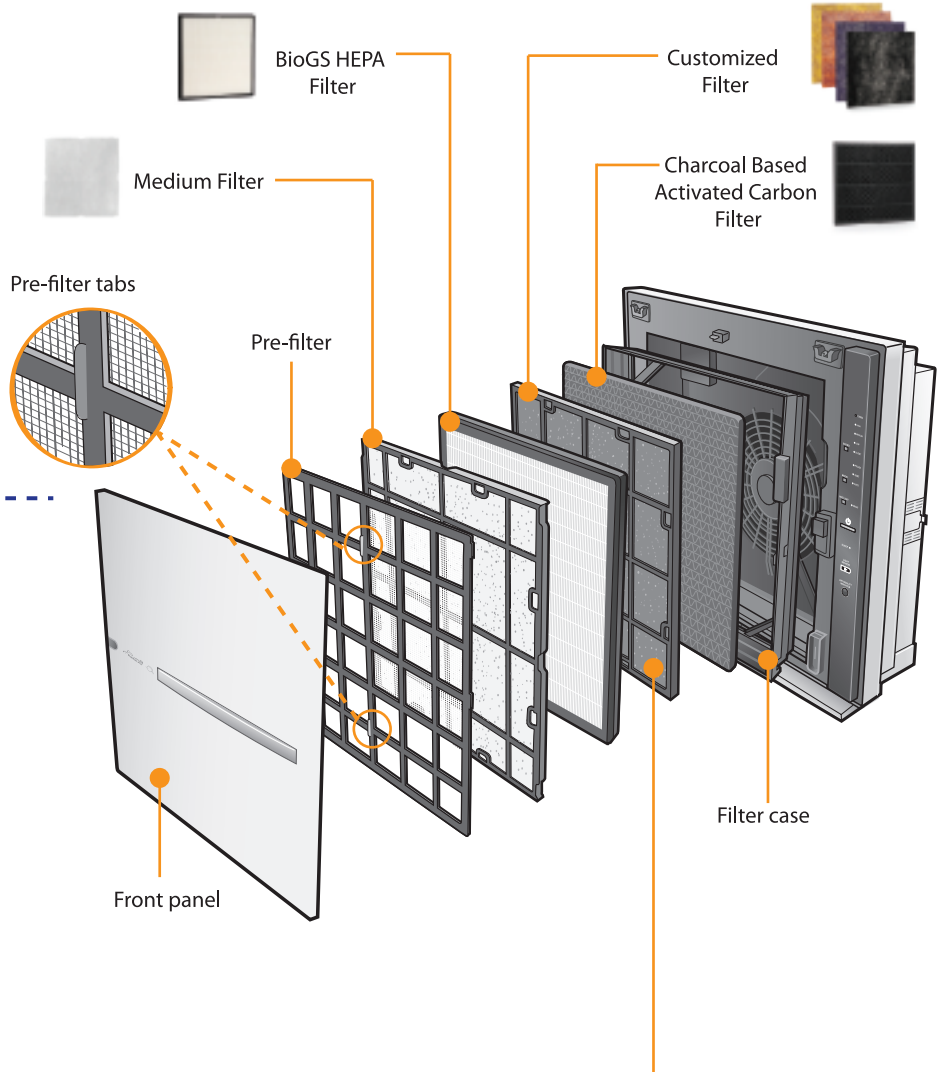

9. Return filter case to the unit. Slide the bottom of the case back into the unit (1), then press the top in (2).

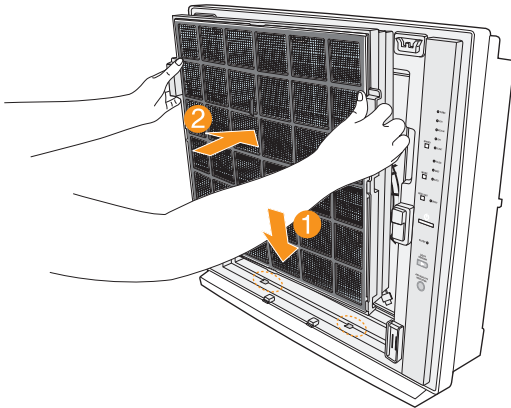


KNOW YOUR CUSTOMIZED FILTER!

Front

Back



TOXIN ABSORBER CUSTOMIZED FILTER:
 FRONT COLOR: PURPLE
 BACK COLOR: BLACK



PET ALLERGY CUSTOMIZED FILTER:
 FRONT COLOR: PURPLE & ORANGE
 BACK COLOR: ORANGE



GERM DEFENSE CUSTOMIZED FILTER:
 FRONT COLOR: PURPLE & YELLOW
 BACK COLOR: YELLOW



ODOR REMOVER CUSTOMIZED FILTER:
 FRONT COLOR: BLACK (THICKER FABRIC LIKE MATERIAL)
 BACK COLOR: BLACK

